

Master List TD 301B Manual Steppers

Part Number:	Description:	Rule:
609-001	CLASSIC STEPPER - TRT TriView	1
609-003	CRADLE - SimulView	1
610-1358	CRADLE - EV29L	1
610-1359	MULTI-PURPOSE WORKSTATION STEPPER - EV29L	1
610-1392	CRADLE - 6LB7s	1
610-1393	MULTI-PURPOSE WORKSTATION STEPPER - 6LB7s	1
610-1396	CRADLE - BCL10-5	1
610-1397	MULTI-PURPOSE WORKSTATION STEPPER - BCL10-5	1
614-092	CLASSIC STEPPER- UST-672-5/7.5	1
614-098	MULTI-PURPOSE WORKSTATION STEPPER - UST-672-5-7.5	1
620-089	CLASSIC STEPPER - 8658	1
620-094	MULTI-PURPOSE WORKSTATION STEPPER - 8658	1
620-112	CRADLE - 8658 (8558), 8848, E14CL4b	1
620-113	MULTI-PURPOSE WORKSTATION STEPPER - 8808E, 8818, e14c4T	1
620-117	MULTI-PURPOSE WORKSTATION STEPPER - 8848, E14CL4b	1
620-120	CRADLE - 8808e, 8818, E14C4t	1
620-121	CRADLE - 8558	1
620-122	CRADLE - 8848, E14CL4b	1
638-025	MULTI-PURPOSE WORKSTATION KIT - 8B4S	1
639-055	CLASSIC STEPPER - TRT33	1
642-316	CLASSIC STEPPER - ERB	1
642-334	MULTI-PURPOSE WORKSTATION STEPPER - ERB	1
642-412	CRADLE - ERB	1
642-487	CRADLE - ERB	1
642-509	CRADLE E7C8L - MPWS	1
642-510	MULTI-PURPOSE WORKSTATION STEPPER E7C8L	1
642-511	CRADLE E7C8L - CLASSIC STEPPER	1
642-512	CLASSIC STEPPER E7C8L	1
644-064	CLASSIC STEPPER - C41L47RP and EUP-U533	1

Master List TD 301B Manual Steppers

Part Number:	Description:	Rule:
644-066	MULTI-PURPOSE WORKSTATION STEPPER - C41L47RP and EUP-U533	1
644-084	CRADLE - UST-672-5/7.5	1
644-085	CRADLE - EUP-U533	1
644-086	CRADLE - UST-672-5/7.5	1
644-087	CRADLE - C41L47RP	1
676-114	CLASSIC STEPPER - Endo-P11	1
676-121	MULTI-PURPOSE WORKSTATION STEPPER - Endo-P11	1
676-152	CRADLE - ENDO-P II	1
676-186	CRADLE - ENDO-P II	1
683-005	CRADLE - 8BP4 MPWS	1
683-006	MULTI-PURPOSE WORKSTATION STEPPER - 8BP4	1
7700-2	MULTI-PURPOSE WORKSTATION STEPPER	1